


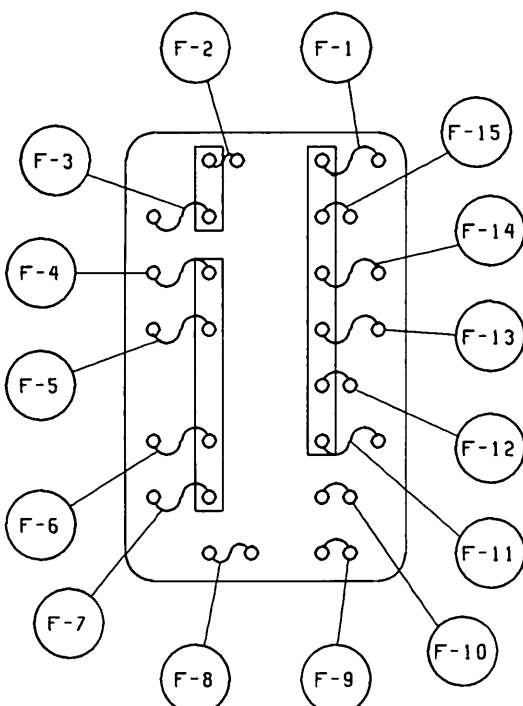

FUSE CHART

F-1	20 AMP	CIGAR LIGHTER >1/P< AND POWER DOOR LOCKS
F-2	3 AMP	SURE TRACK
F-3	7.5 AMP	WARNING LAMPS
F-4	15 AMP	BACK/UP, T/S, AND CORNERING LAMPS
F-5	15 AMP	RADIO & POWER ANTENNA
F-6	7.5 AMP	SPEED CONTROL, W/S WASHER, AND HEATED BACKLITE SWITCH
F-7	7.5 AMP	ACCESSORY RELAY
F-8	6 AMP	I/P ILLUMINATION
F-9	35 AMP	AUTOMATIC TEMPERATURE CONTROL
F-10	20 AMP	POWER WINDOWS
F-11	15 AMP	COURTESY LAMPS
F-12	30 AMP	POWER SEATS, AND AUTOMATIC SEAT BACK LATCH
F-13	30 AMP	HEATED BACKLITE RELAY
F-14	20 AMP	CIGAR LIGHTERS -DOOR<
F-15	20 AMP	STOPLAMP SWITCH

LAMP DESCRIPTION	CANDLEPOWER OR WATTAGE	TRADE NUMBER
HEADLAMP		
HI/LO BEAM	37.5-60	4000
HI BEAM	37.5	4001
FRONT PARK/TURN	3-32	1157NA
TAIL/STOP/TURN	3-32	1157
BACK-UP	32	1156
SIDE MARKER		
FRONT	2	194
REAR	2	194
LICENSE PLATE	4	97
COURTESY		
DOVE-W/MAP	12	211
DOOR	4	214-2
ENGINE COMPT	6	631
GLOVE BOX	2	158
GLOVE BOX-CONSOLE	2	1895
INSTR PANEL	6	631
LUGGAGE COMPT	6	631
READING		
ILLUMINATION		
ASH TRAY-DOOR	.7	1445
ASH TRAY-INSTR	1	161
A.T.C. CONTROL	1	161
CIGAR LIGHTER	2	1891
CIGAR LITER-DOOR	3	168
CLUSTER	2	194
HEADLAMP SW	3	1816
RADIO	2	194
WIPER SWITCH	2	1891
WARNING		
ALT	2	194
BRAKE	2	194
DOOR AJAR	2	194
LOW FUEL	2	194
OIL	2	194
SEAT BELT	.5	P1A
TEMP	2	194
INDICATOR		
AM-FM STEREO	.75	1892
CORNERING	50	1196
HEATED BACKLITE	2	194
HI-BEAM	2	194
TURN	2	194

WIRING COLOR KEY
PRIMARY COLORS

BLACK	BK
BROWN	BR
TAN	T
RED	R
PINK	PK
ORANGE	O
YELLOW	Y
DARK GREEN	DG
LIGHT GREEN	LG
DARK BLUE	DB
LIGHT BLUE	LB
PURPLE	P
GRAY	GY
WHITE	W
HASH	(H)
DOT	(D)

STRIPE IS UNDERSTOOD
AND HAS NO COLOR KEY

HEAVY SOLID LINE REPRESENTS BATTERY FEED
HEAVY DASHED LINE REPRESENTS ACCESSORY FEED

INDEX

COMPONENT	LOCATION
ALTERNATOR	D-1
70 AMP	D-3
90 AMP	F-5
ALTERNATOR REGULATOR	F-5
BUZZER	E-11
ENGINE TEMPERATURE	D-33
HEADLAMP >ON< AND KEY	B-26
REMIINDER	D-33
SEAT BELT	B-26
CIGAR LIGHTER	E-60
INSTRUMENT PANEL	E-57
L.H. DOOR	E-58
R.H. DOOR >FRONT<	E-59
R.H. DOOR >REAR<	E-45
CLOCK	C-22
C/V UNIT & CHOKE	C-22
COURTESY LAMPS	
DOOR	
L.H.	C-37
R.H.	B-38
INSTRUMENT PANEL	E-42,43
DOVE & MAP	E-41,42
ENGINE COMPARTMENT	E-38
GLOVE BOX	D-44
LUGGAGE COMPARTMENT	E-38
READING	D-30,31
DISTRIBUTOR	D-5
EMERSON HEATER	E-119
FLASHER	
EMERGENCY	D-82
TURN SIGNAL	C-81
FUEL GAUGE	B-21
HORNS	F-125,126
IGNITION COIL	B-6
ILLUMINATION LAMPS	
ASH RECEPTACLE	D-72
A.T.C. CONTROL SWITCH	D-61
CIGAR LIGHTER	
INSTRUMENT PANEL	E-63
L.H. DOOR	D-66
R.H. DOOR >FRONT<	E-65
R.H. DOOR >REAR<	E-66
CONSOLE	F-39
HEADLAMP SWITCH	D-61
INSTRUMENT CLUSTER	C-58,60
W/S WIPER SWITCH	D-71
INDICATOR LAMPS	
ALTERNATOR	B-10
DOOR AJAR	A-25
DUAL BRAKE	B-15
ENGINE TEMPERATURE	F-10
HEATED BACKLITE >ON<	E-100
HIGH BEAM	E-74
LOW FUEL	E-23
OIL PRESSURE	C-15
SEAT BELT	B-27
TURN SIGNAL	
L.H.	E-86
R.H.	D-86
LAMPS	
HEADLAMPS	
L.H.	E-75,76
R.H.	E-77,78
LICENSE PLATE	D-91

COMPONENT	LOCATION
LAMPS >CONTINUED<	
MARKER	
FRONT	D-77,78
REAR	D-91,92
PARKING	C-76,78
REAR	
L.H.	D-89,90
R.H.	D-93,94
MOTOR	
A.T.C. BLOWER	E-171
A.T.C. SERVO TRANSDUCER	D-168
POWER ANTENNA	E-103
POWER DOORLOCK	
L.H.	E-184
R.H.	D-183
POWER SEAT	
L.H.	F-132
R.H.	F-135
POWER WINDOW	
L.H. FRONT	F-140
L.H. REAR	F-143
R.H. FRONT	F-142
R.H. REAR	F-144
STARTER	A-3
W/S WASHER PUMP	D-56
W/S WIPER	E-49
RADIO & SPEAKERS	
AM SYSTEM	C-109
AM STEREO TAPE SYSTEM	B-115
AM/FM/MPX SYSTEM	B-110
NOISE SUPPRESSION CAP.	E-4
RELAY	
A.T.C. HIGH BLOWER	F-173
A.T.C. RANGE	F-172
HEADLAMP DIMMER	B-74
HEADLAMP >ON<	C-35
HEATED BACKLITE	D-98
HORN (w/100 Sags Control)	B-125
LOW FUEL	E-21
POWER WINDOW	C-138
SEAT BACK LATCH	B-127
TRAILER TOWING	C-150
RESISTOR	
AUTO. HEADLAMP DIMMER	D-73
A.T.C.	
AMPLIFIER FEEDBACK	F-166
BLOWER MOTOR	E-173
CALIBRATION	F-167
TEMPERATURE CONTROL	E-165
SENDER-FUEL GAUGE	D-20
SENSOR	
A.T.C. AMBIENT TEMP.	E-164
A.T.C. IN-CAR TEMP.	E-163
PHOTO UNIT & AMPLIFIER	C-73
SOLENOID	
A.T.C. VACUUM ASSY	D-175
A/C CLUTCH	E-161
EMISSION CONTROL (THERMOSTAT)	C-9
SEAT BACK LATCH	D-126,128
VACUUM VALVE (2-WAY)	F-9
SPEED CONTROL SYSTEM	
ACTUATOR	F-122
AMPLIFIER	C-122
SENSOR	D-121

COMPONENT	LOCATION
SURE TRACK SYSTEM	
ACTUATOR	E-17
MODULE	B-18
SENSOR	F-19
SWITCH	
AMBIENT TEMP. EMISSION	D-9
A.T.C. CLUTCH	F-161
A.T.C. CONTROL	A-162
A.T.C. ENGINE TEMP.	D-169
A.T.C. SERVO	A-174
BACK/UP LAMP	D-27
CONSOLE ILLUMINATION	E-36
CORNERING LAMP	B-79
DOVE & MAP LAMP	E-41
DOOR AJAR	
L.H.	C-25
R.H.	E-25
DOOR JAMB	
L.H.	B-33
R.H.	D-36
DOORLOCK	
L.H.	B-181
R.H.	B-183
DUAL BRAKE WARNING	E-14
GLOVE BOX	E-44
HEADLAMP	C-63
HEADLAMP FOOT DIMMER	
STANDARD	B-76
AUTOMATIC	B-73
HEATED BACKLITE	C-99
HORN	
STANDARD	C-125
SPEED CONTROL	D-124
IGNITION	C-13
KEY REMINDER	F-35
LUGGAGE COMPARTMENT LAMP	E-39
OIL PRESSURE	E-15
POWER ANTENNA	C-103
POWER SEAT	
L.H.	B-132
R.H.	B-135
POWER WINDOW	
MASTER	A-142
R.H. FRONT	E-141
L.H. REAR	E-143
R.H. REAR	E-144
READING LAMP	B-30,31
SEAT BELT RETRACTOR	
L.H.	D-28
R.H.	E-29
SEAT SENSOR	D-29
SPEED CONTROL	E-124
STOPLAMP	D-82
START/INTERLOCK	D-26
TURN/EMERGENCY SIGNAL	B-84,85
W/S WIPER/WASHER	
2 SPEED DEPRESSED PARK	C-51
INTERMITTENT	B-55
GOVERNOR ASSY	C-54

COMPONENT LOCATION CHART

RELAY PANEL	LEFT OF BRAKE PEDAL SUPPORT
TURN SIGNAL FLASHER	BEHIND INSTRUMENT PANEL, AT LEFT END OF DASH PANEL
EMERGENCY WARNING FLASHER	ON FUSE PANEL
KEY WARNING AND HEADLIGHTS "ON" BUZZER	ON RELAY PANEL
HEADLIGHTS "ON" RELAY	ON RELAY PANEL
SEAT BELT WARNING BUZZER	ON RELAY PANEL
LOW FUEL WARNING SWITCH	ABOVE AND RIGHT OF GLOVE BOX BEHIND FINISH PANEL
AUTO. SEAT BACK RELEASE RELAY	LEFT SIDE OF BRAKE PEDAL SUPPORT
AUTO. SEAT BACK DIODE ASSEMBLY	TAPED TO HARNESS NEAR SEAT BACK RELEASE RELAY
HEATED BACKLITE RELAY	ON RELAY PANEL
WINDSHIELD WIPER PAUSE CONTROL GOVERNOR	ON INSTRUMENT PANEL REINFORCEMENT NEAR CENTER LINE OF CAR (REQUIRES REMOVAL OF CRASH PAD)
HIGH BLOWER RELAY (A.T.C. ONLY)	ENGINE COMPT. ON DASH PANEL LEFT OF BRAKE BOOSTER
LOW RANGE RELAY (A.T.C. ONLY)	ENGINE COMPT. ON DASH PANEL LEFT OF BRAKE BOOSTER
STOPLIGHT CIRCUIT BREAKER	IN FUSE PANEL
A/C CIRCUIT BREAKER	IN FUSE PANEL
ELECTRIC DECKLID RELEASE CIRCUIT BREAKER	LEFT OF SWITCH
WINDOW SAFETY RELAY	ENGINE COMPT. ON DASH PANEL RIGHT OF BRAKE BOOSTER
AUTO HEADLIGHT DIMMER RELAY	LEFT SIDE BRAKE PEDAL SUPPORT
TRAILER TOWING RELAYS	LEFT SIDE OF LUGGAGE COMPARTMENT
ENGINE TEMP. WARNING BUZZER	ON RELAY PANEL