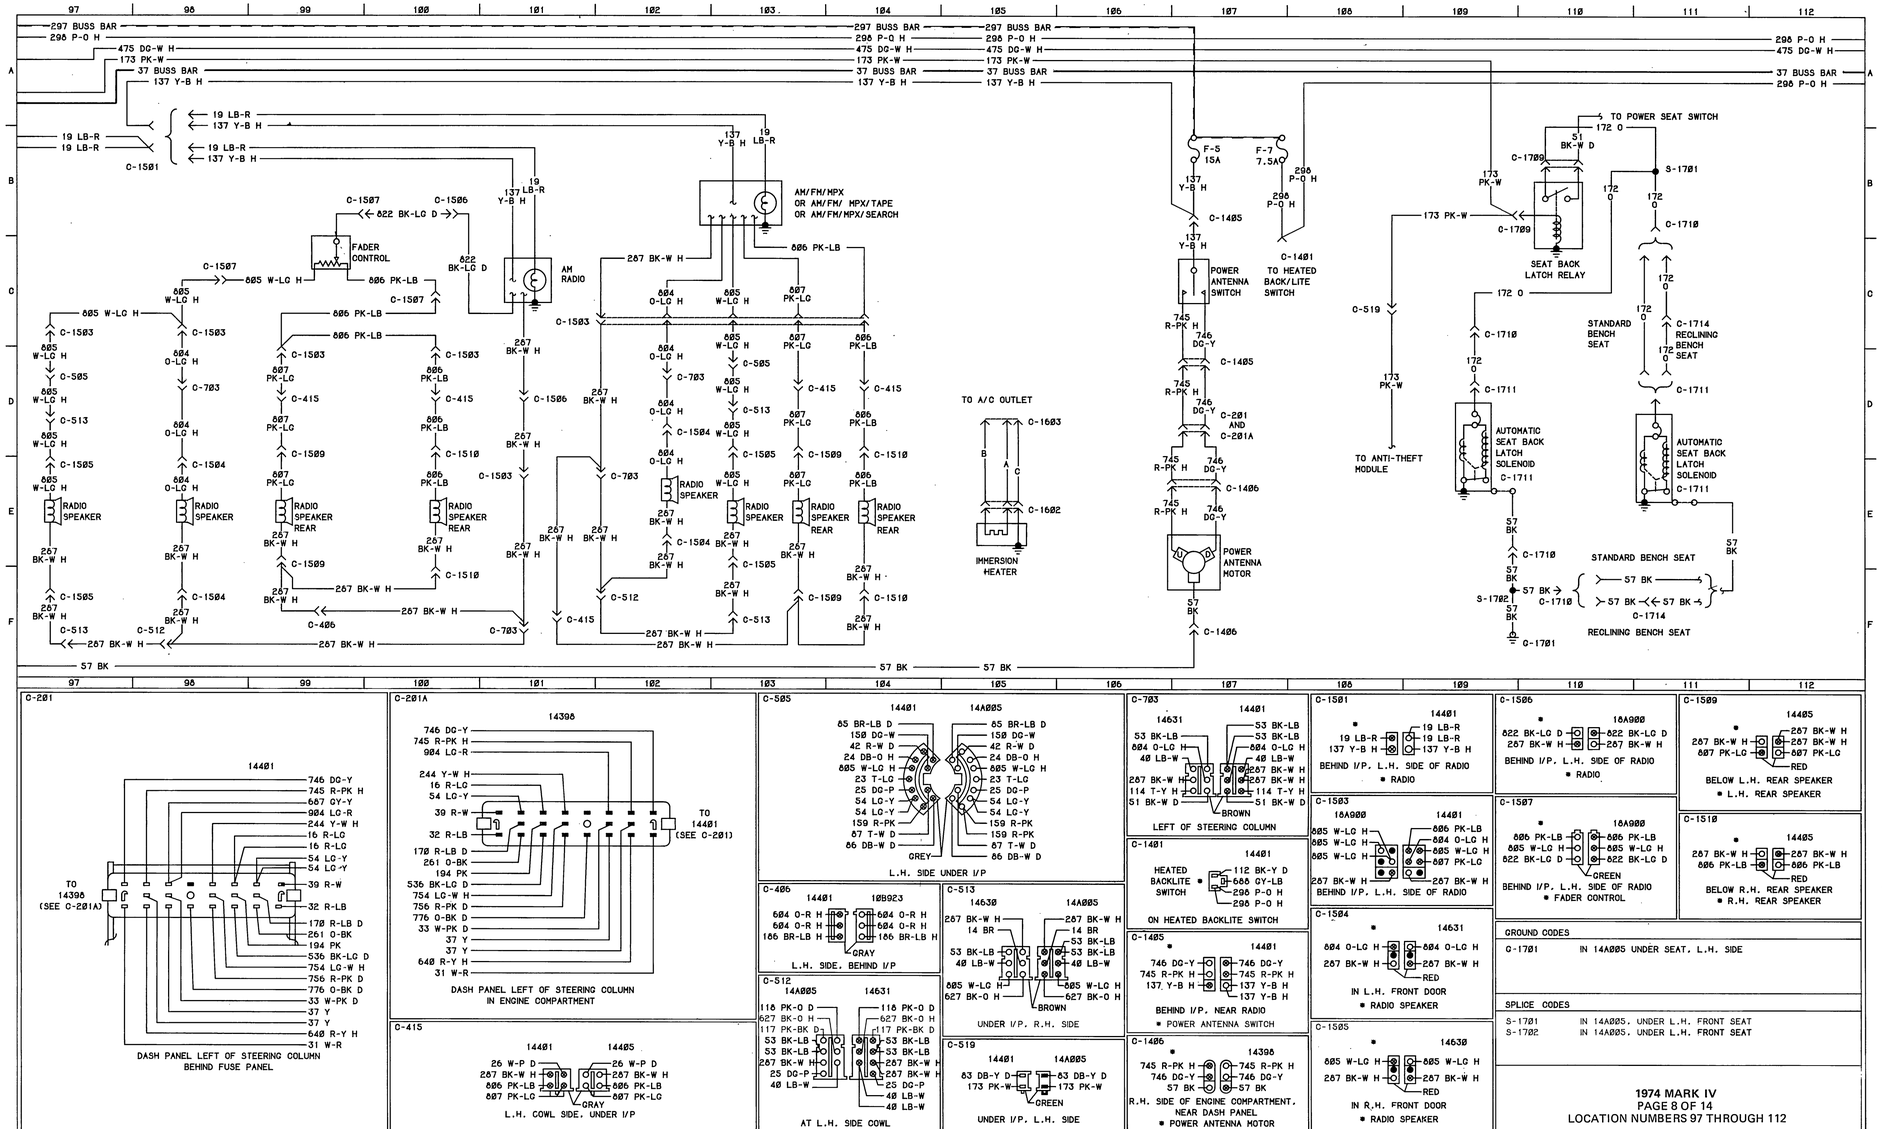
297 BUSS BAR
296 P-O H
475 DG-W H
173 PK-W
37 BUSS BAR
137 Y-B H
19 LB-R
C-1501
AM/FM/MPX
OR AM/FM/ MPX/TAPE
OR AM/FM/MPX/SEARCH
FADER CONTROL
AM RADIO
RADIO SPEAKER
RADIO SPEAKER REAR
C-1507
C-1505
C-1503
C-1504
C-1509
C-1510
C-1506
C-783
C-415
C-512
C-513
C-486
C-1485
C-1401
TO HEATED BACK/LITE SWITCH
F-5 15A
F-7 7.5A
POWER ANTENNA SWITCH
POWER ANTENNA MOTOR
C-1486
TO A/C OUTLET
C-1603
C-1602
IMMERSION HEATER
TO POWER SEAT SWITCH
C-1709
SEAT BACK LATCH RELAY
S-1701
C-1710
C-519
TO ANTI-THEFT MODULE
STANDARD BENCH SEAT
C-1714
RECLINING BENCH SEAT
C-1711
AUTOMATIC SEAT BACK LATCH SOLENOID
S-1702
C-1701
57 BK


C-201
14401
DASH PANEL LEFT OF STEERING COLUMN
BEHIND FUSE PANEL


C-201A
14398
DASH PANEL LEFT OF STEERING COLUMN
IN ENGINE COMPARTMENT


C-415
L.H. COWL SIDE, UNDER I/P


C-505
L.H. SIDE UNDER I/P
C-486
L.H. SIDE, BEHIND I/P
C-512
AT L.H. SIDE COWL
C-513
UNDER I/P, R.H. SIDE
C-519
UNDER I/P, L.H. SIDE


C-783
C-1401
LEFT OF STEERING COLUMN
ON HEATED BACKLITE SWITCH
C-1405
BEHIND I/P, NEAR RADIO
• POWER ANTENNA SWITCH
C-1486
R.H. SIDE OF ENGINE COMPARTMENT, NEAR DASH PANEL
• POWER ANTENNA MOTOR


C-1501
BEHIND I/P, L.H. SIDE OF RADIO
• RADIO
C-1503
BEHIND I/P, L.H. SIDE OF RADIO
C-1504
IN L.H. FRONT DOOR
• RADIO SPEAKER
C-1505
IN R.H. FRONT DOOR
• RADIO SPEAKER


C-1506
BEHIND I/P, L.H. SIDE OF RADIO
• RADIO
C-1507
BEHIND I/P, L.H. SIDE OF RADIO
• FADER CONTROL
GROUND CODES
C-1701 IN 14A005 UNDER SEAT, L.H. SIDE
SPLICE CODES
S-1701 IN 14A005, UNDER L.H. FRONT SEAT
S-1702 IN 14A005, UNDER L.H. FRONT SEAT
1974 MARK IV
PAGE 8 OF 14
LOCATION NUMBERS 97 THROUGH 112


C-1509
BELOW L.H. REAR SPEAKER
• L.H. REAR SPEAKER
C-1510
BELOW R.H. REAR SPEAKER
• R.H. REAR SPEAKER

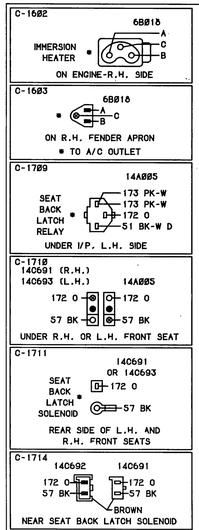
C-1602
IMMERSION HEATER
ON ENGINE-R.H. SIDE
C-1603
ON R.H. FENDER APRON
• TO A/C OUTLET
C-1709
SEAT BACK LATCH RELAY
UNDER I/P, L.H. SIDE
C-1710
C-1714
RECLINING BENCH SEAT
UNDER R.H. OR L.H. FRONT SEAT
C-1711
SEAT BACK LATCH SOLENOID
REAR SIDE OF L.H. AND R.H. FRONT SEATS
C-1714
NEAR SEAT BACK LATCH SOLENOID